

Wire /Cable Industrial Stripper ML-2 & ML-3

HOW TO REPLACE THE ADAPTOR



1. unscrew the hand lever



2. take off the wire input spindle



3. insert the square spindle
shorter part at front



4. adjust spindle in position



5. tight the guide screw



6. tight the hand lever
tight both side